

# INDASH <sup>by</sup> PANAVISE®

**MOUNTING LOCATION:**

Right side of radio

**TOOLS REQUIRED:**

Hook tool  
T20 Torx driver

**HARDWARE INCLUDED:**

None

**CELL PHONE & MEDIA MOUNT**

**INSTALLATION INSTRUCTIONS**

**PART#: 75138-404**

**MFG: VOLKSWAGEN**

**MODELS & YEARS:**

**Jetta 2004-2005**

**Golf 2004-2005**

**GTI 2004-2005**

**(New Upper Mount Changed Only)**

**\*\* ADVISEMENT \*\***

Read instructions completely prior to starting installation. All InDash Mounts are designed so that after installation, phone is facing normal driver position for left-hand drive vehicles. This mount is not designed to be used in foreign countries with right-hand drive vehicles. Use extreme care when working around the plastic components on the dash. Excess force, can cause breakage of the plastic components.

**NOTE: Only the Upper InDash Mount changed for 04&05, 75138-200 remains the same**


**STEP #1** Mount will be installed on upper right corner of the radio, between the bezel between the radio and the glove compartment molding. The glove compartment which covers from the passenger door all the way to the right side of the radio and climate control will need to be released from the left side.

**STEP #2** With T20 Torx wrench remove (3) screws on the underside of the glove compartment and set aside. Open the glove compartment and remove (3) screws from the top side. Set screws aside. Insert the hook tool on the right side of the radio between the glove compartment molding. Pull on the glove compartment molding to release (2) clips to the right of the radio. Once the glove compartment molding has been released from the left side, locate a T-20 Torx Screw that holds the right side of the bezel next to the radio. Remove this screw.

**STEP #3** Place the screw through the InDash Mount lower screw hole. Insert the T20 Torx wrench through the hole closest to the bend on the face of the InDash Mount where the part number is stamped, and hold the screw with the T20 Torx wrench. While holding the screw with the wrench, place the InDash Mount over the screw hole and tighten screw.

**STEP #4** Align the (2) clips of the glove compartment molding to the clip holes and push molding to secure clips. Install the (3) screws to the top side, inside the glove compartment. Close the glove compartment and install the (3) screws at the bottom. Attach phone holder to InDash Mount.

**INSTALLATION IS NOW COMPLETE. ENJOY YOUR NEW PANAVISE INDASH MOUNT.**

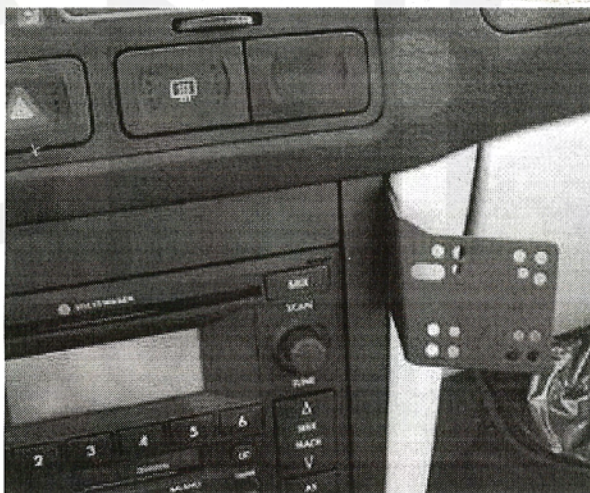

Finished Install Picture



12-06-04